

## Installation, Operation and Maintenance Procedures

- Fasten the loudspeaker to the wall by 1 3 screws.
- To change the position of the loudspeaker, adjust the bracket (by loosening / tightening the screws) as required.
  Unscrew lid, lead cable through cable gland, connect to terminal (70V or 100V) and select required tapping in to
- the transformer.Screw lid back into place with washers and gasket.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.